



# The TOWN OF NORWOOD

Commonwealth of Massachusetts

## MUNICIPAL LIGHT DEPARTMENT

*Kevin Shaughnessy, Supt.*

(781) 948-1100

### **Electric Service Requirement Summary**

*The following is a summary of the information required for service with Norwood Light.*

Single or Multifamily Home: The following is for Single Phase 100-200 Amp service intended for residential use. The following must be complete prior to Norwood Light energizing:

- Have the service inspected by the Norwood Wire Inspector at 781-762-1240. Norwood Light will not start any work until we have approval from the Wire Inspector.
- Call our office at (781) 948-1100 to schedule us to come out and energize service.

Commercial Single or 3-Phase service (B-Rate): The following is for commercial and apartment complex services. The following must be complete prior to Norwood Light energizing:

- Provide Norwood Light with a plot plan of the property including present and future conditions with structures, utility poles and other relevant information.
- Provide electric data that includes service size calculations and meets specs.
- Please call our office at (781) 948-1100 to have a Norwood Light engineer survey the site.

Commercial 3-Phase Primary Rate (P-Rate) The following is for customers who prefer to be billed on our Primary Rate. These customers must provide their own transformers and switchgear. The following must be completed prior to Norwood Light energizing:

- Please call our office at (781) 948-1100 to talk with a Norwood Light engineer to see if going with a P-Rate is right for your business.
- Transformer information must be provided and meet specs.
- Switchgear information must be provided and meet specs.
- Cable information must be provided and meet specs.